




Originalbetriebsanleitung
 Original instructions
 Notice originale
 Manual original
 Manual original
 Istruzioni originali
 Oorspronkelijke
 gebruiksaanwijzing
 Original brugsanvisning
 Bruksanvisning i original
 Original driftsinstruks
 Alkuperäiset ohjeet
 Πρωτότυπο οδηγίων
 χρήσης
 Original işletme talimatı
 Instrukcja oryginalna
 Původní návod k používání
 Pôvodný návod na použitie
 Eredeti használati utasítás
 Оригинальное руководст-
 во по эксплуатации
 Оригінальна інструкція з
 експлуатації
 Instrucțiuni originale
 Оригінална інструкція
 Originalno uputstvo za rad
 Izvirna navodila
 Originalne upute za rad
 Algupärane kasutusjuhend
 Instrukcijas oriģinālvalodā
 Originali instrukcija





Deutsch	Polski
English	Česky
Français	Slovensky
Español	Magyar
Português	Русский
Italiano	Українська
Nederlands	Română
Dansk	Български
Svenska	Srpski
Norsk	Slovensko
Suomi	Hrvatski
Ελληνικά	Eesti
Türkçe	Latviešu
	Lietuviškai



BOSCH

AHM 30
AHM 38
AHM 30C
AHM 38C
AHM 30G
AHM 38G

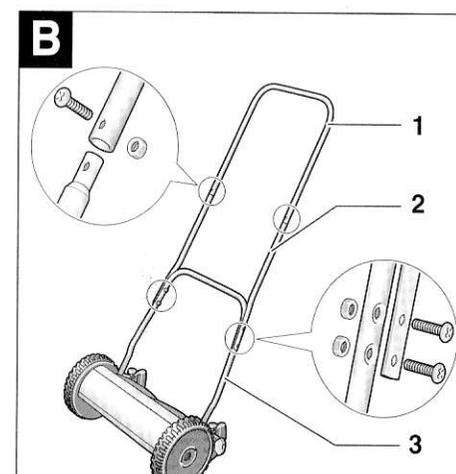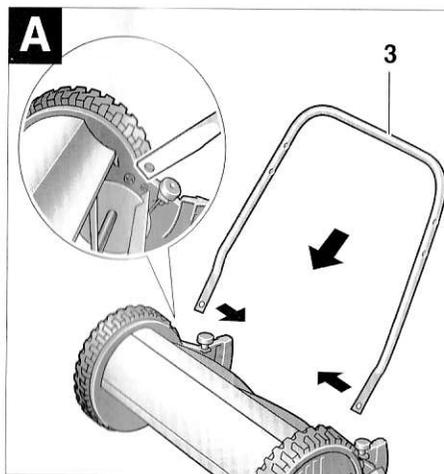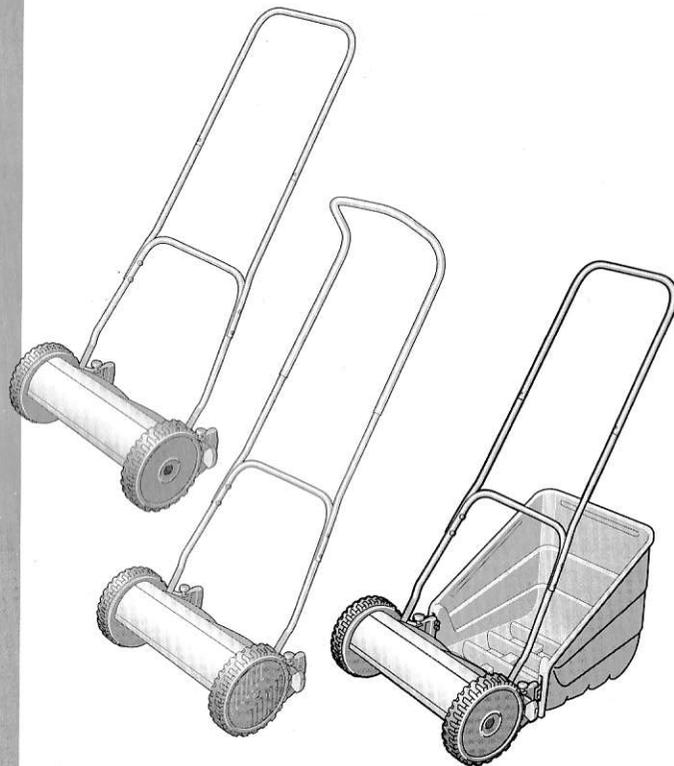

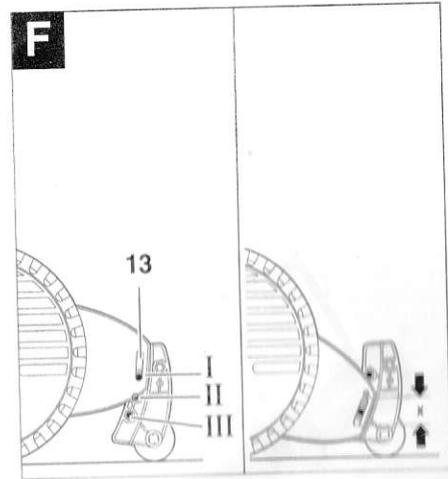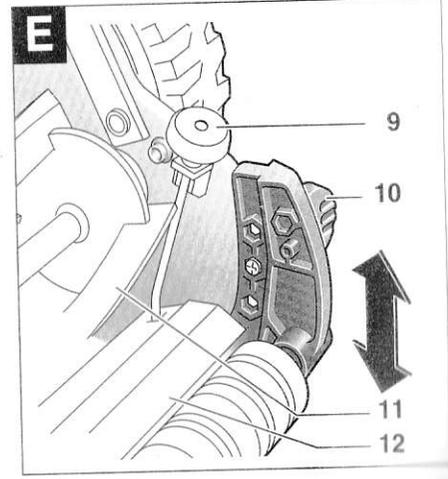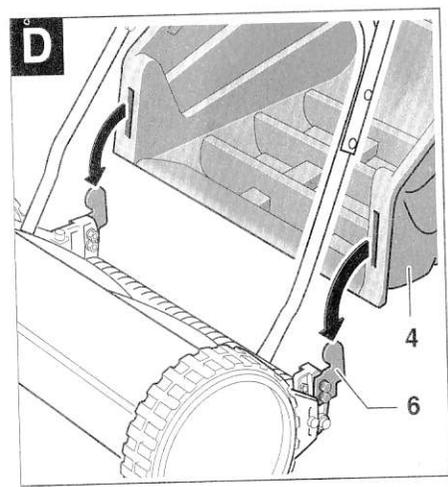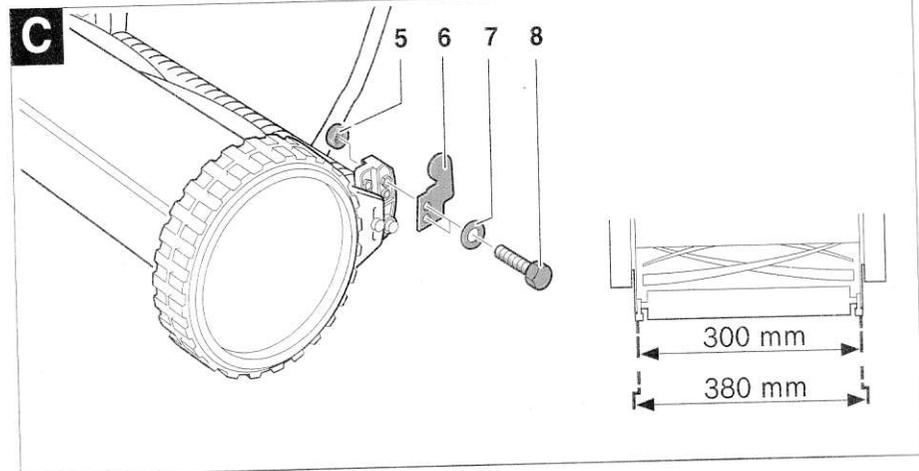



Safety Notes



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in serious injury.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never mow while people, especially children or pets, are nearby. Walk, never run.
- Do not operate the mower when barefoot or wearing open sandals.
- Thoroughly inspect the area where the appliance is to be used and remove all objects, which may be thrown by the machine.
- Always be sure of your footing on slopes. Do not mow excessively steep slopes.
- Keep all nuts, bolts and screws tight to be sure that the lawnmower is in safe working condition.
- Replace worn or damaged parts for safety.
- Be careful during adjustment of the machine to prevent entrapment of the fingers between moving blades and fixed parts of the machine.

Technical data

Cylinder Mower	AHM 30	AHM 38	AHM 30C	AHM 38C	AHM 30G	AHM 38G
Part number (typ)	0 600 886 001	0 600 886 101	0 600 886 002	0 600 886 102	3 600 H86 000	3 600 H86 100
Blade width	30 cm	38 cm	30 cm	38 cm	30 cm	38 cm
No of Cylinder Blades	4	4	5	5	4	5
Height of cut	12–40 mm	12–40 mm	15–43 mm	15–43 mm	12–40 mm	15–43 mm
Grasscatcher	–	–	–	–	●	●
Weight	6.4 kg	7.2 kg	6.6 kg	7.5 kg	7.2 kg	8.6 kg

Intended Use

This product is intended for domestic lawn mowing.

Introduction

This manual gives instructions on the correct assembly and safe use of your machine. It is important that you read these instructions carefully.

When fully assembled the machine weighs approximately 6.4 – 8.6 kg. If necessary, obtain assistance to remove from packaging.

Take care when carrying the mower to the lawn, as the blades are sharp.

Delivered Items

Carefully remove the machine from its packaging and check that you have all the following items:

- Lawnmower
- Bottom handle
- Top handle
- 2 Handle Centres
- 6 Nuts
- 6 Bolts

- Grasscatcher (AHM 30/38G only)
- 2 Grasscatcher hooks (AHM 30/38G only)
- 2 Grasscatcher nuts (AHM 30/38G only)
- 2 Washers (AHM 30/38G only)
- 2 Grasscatcher bolts (AHM 30/38G only)
- Operating instructions

When parts are missing or damaged, please contact your dealer.

Operating Controls

- 1 Handle top
- 2 Handle centres
- 3 Handle bottom
- 4 Grasscatcher*
- 5 Grasscatcher nut*
- 6 Grasscatcher hook*
- 7 Washer*
- 8 Grasscatcher bolt*
- 9 Adjuster knob
- 10 Wing nut
- 11 Cutting cylinder
- 12 Blade
- 13 Roller bracket

*Not all of the accessories illustrated or described are included as standard delivery.

Assembly

Handle assembly

- A** Attach bottom handle **3** to the mower.
B Assemble the top handle **1** to the handle centres **2**, and fit to handle bottom **3**.

Grasscatcher assembly (AHM 30/38G only)

- C D** Attach grasscatcher hooks **6** to mower using bolts **8**, washers **7** and nuts **5** and fit grasscatcher **4**.

Adjusting the Cutting Height

E Coarse:

The roller brackets **13** should be set in one of three positions according to the type of lawn: **I** for high range for bumpy lawns, **II** for medium range for average lawns and **III** for low range for reasonably flat lawns. You should only need to make this adjustment once, thereafter use the „Fine“ adjustment to cut longer or shorter grass.

To change the height of cut:

1. Remove the wingnut **10** and bolt.
2. Reposition the bolt for required height of cut.
3. Refit wingnut **10**.

F Fine (X):

Slacken wing nut **10** on both sides of the mower. Move both roller brackets **13** equally to the required height of cut.

Mowing

- G** For best mowing results, begin mowing from the edge of the lawn in a forwards direction, forming an „L“ pattern. Turn around at the end of the length, slightly overlapping the previous swath.

Maintenance

Note: To ensure long and reliable service, carry out the following maintenance regularly.

Regularly check for obvious defects such as loose, dislodged or damaged blade, loose fixings, and worn or damaged components.

Check that covers and guards are undamaged and correctly fitted. Carry out necessary maintenance or repairs before using.

If the mower should happen to fail despite the care taken in manufacture and testing, repair should be carried out by an authorised customer service agent for Bosch garden products.

For all correspondence and spare parts orders, always include the 10-digit part number (TYP) from the nameplate of the machine!

Adjusting the Blade

The cutting cylinder should be adjusted if the grass is not cut cleanly and evenly.

Turn both adjuster knobs **9** clockwise a little at time until the cutting cylinder **11** lightly brushes the bottom blade **12**.

Note: The blades act like a pair of shears.

Accessories

Grasscatcher AHM 30/30C..... 0 600 886 060

Grasscatcher AHM 38/38C..... 0 600 886 160

After Mowing/Storage

Clean the exterior of the machine thoroughly using a soft brush and cloth. Do not use water, solvents or polishes. Remove all grass and debris.

Turn the machine on its side and clean the blade area. If grass cuttings are compacted in the blade area, remove with a wooden or plastic implement.

Store the machine in a dry place. Do not place other objects on top of the machine.

After-Sales Service and Customer Assistance

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. Exploded views and information on spare parts can also be found under:

www.bosch-pt.com

Our customer consultants answer your questions concerning best buy, application and adjustment of products and accessories.

Great Britain

Robert Bosch Ltd. (B.S.C.)

P.O. Box 98

Broadwater Park

North Orbital Road

Denham

Uxbridge

UB 9 5HJ

Tel. Service: +44 (0844) 736 0109

Fax: +44 (0844) 736 0146

E-Mail: boschservicecentre@bosch.com