


**JOSEPH
GLEAVE**
Supply Specialists

Instruction Manual

Fan Heater

Powerful, Efficient Heating & Cooling

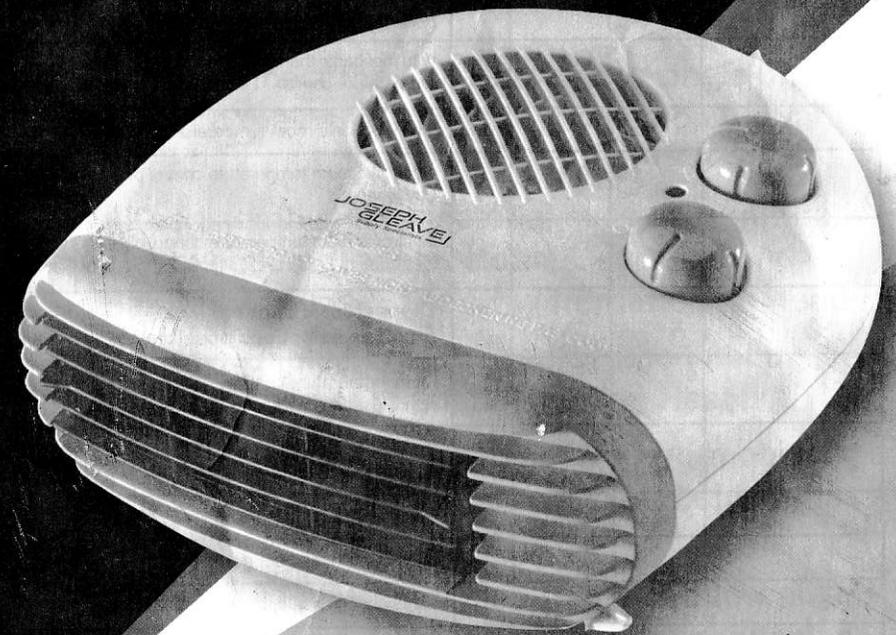

0161 865 6025
www.gleave.co.uk

This product is only suitable for well insulated spaces or occasional use.

Model no. 136714

Information requirement for the electric local space heaters

| Model identifier(s): FH-15A | | | | | |
|--|--|---------|---|--|------|
| Item | Symbol | Value | Unit | Item | Unit |
| Heat output | | | Type of heat input, for electric storage local space heaters only (select one) | | |
| Nominal heat output | P _{nom} | 1.8-2.0 | kW | manual heat charge control, with integrated thermostat | No |
| Minimum heat output (indicative) | P _{min} | 0.015 | kW | manual heat charge control with room and/or outdoor temperature feedback | No |
| Maximum continuous heat output | P _{max,c} | 2.0 | kW | electronic heat charge control with room and/or outdoor temperature feedback | No |
| Auxiliary electricity consumption | | | fan assisted heat output | | No |
| At nominal heat output | e _{lmax} | N/A | kW | Type of heat output/room temperature control (select one) | |
| At minimum heat output | e _{lmin} | N/A | kW | single stage heat output and no room temperature control | No |
| In standby mode | e _{lSB} | 0 | kW | Two or more manual stages, no room temperature control | No |
| | | | | with mechanic thermostat room temperature control | Yes |
| | | | | with electronic room temperature control | No |
| | | | | electronic room temperature control plus day timer | No |
| | | | | electronic room temperature control plus week timer | No |
| | | | Other control options (multiple selections possible) | | |
| | | | | room temperature control, with presence detection | No |
| | | | | room temperature control, with open window detection | No |
| | | | | with distance control option | No |
| | | | | with adaptive start control | No |
| | | | | with working time limitation | No |
| | | | | with black bulb sensor | No |
| Contact details | Joseph Gleave & Son Ltd Beech House 995 Chester Road Stretford Manchester M32 0NB | | | | |

Important Safety Notes

This Fan Heater requires no installation and should only be used as a portable appliance in a flat position as shown on the front cover of these instructions.

The Fan Heater is fitted with a safety device, which will switch off the heater in the event of accidental overheating (e.g. obstruction of air intake/outlet grills or fan not operating correctly). To reset, disconnect the plug from the power source, remove the cause of overheating, wait a few minutes then plug the appliance in again.

DO - Read all instructions and safety notes before using the Fan Heater.

DO - Only connect the Fan Heater to a single-phase socket with mains voltage as specified on the rating plate.

DO - Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains and similar items at least 1m away from the Fan Heater.

DO - Always unplug the Fan Heater when not in use. Do not use the cord to unplug the Fan Heater.

DO - Keep the air inlet and outlet free from objects: at least 1m (39") in front and 50cm (20") behind the Fan Heater.

DO - Keep the Fan Heater clean. Do not allow any objects to enter any ventilation or exhaust openings as this may cause electric shock, fire or damage to the Fan Heater.

DON'T leave the Fan Heater running when you leave your premises. Ensure that the switch is in OFF (O) position and the thermostat is in minimum position. Always unplug the Fan Heater before you leave your premises.

DON'T hang anything on or in front of the Fan Heater.
WARNING: In order to avoid overheating, don't cover the Fan Heater.

DON'T install the Fan Heater directly below a socket.

DON'T touch the front grill when Fan Heater is in operation. Grill parts become very hot.

DON'T spill any liquids on the Fan Heater

DON'T let animals or children touch or play with the Fan Heater.

(CAREFUL: the air outlet gets hot during operation (more than 80 °C or 175 °F)

DON'T use the Fan Heater in rooms with explosive gas or whilst using inflammable solvents, varnish or glue.

DON'T use the Fan Heater in or near to showers, bathrooms, wash basins, swimming pools, etc.

DON'T use the Fan Heater to dry laundry. Never obstruct the intake and outlet grilles as there is danger of overheating.

DON'T use the appliance while it is cooling down, in order to avoid overheating with the attendant risk of fire.

DON'T use the appliance in rooms less than 4m². This is equivalent to a 6ft square Room

Keep fan heater away from all combustibile material that can act as a fuel for fire!



***Use Safe!
Leave Safe!
Stay Safe!***

Operating Instructions

Always choose a safe location for the Fan Heater, keeping in mind the safety precautions outlined previously. How to operate:

1. Remove Fan Heater from the box and unwind the power cord to its full length.
2. Place Fan Heater on a firm level surface and in a stable flat position.
3. Make sure the function knob is turned to OFF position "O".
4. Plug the cord into a 240v AC power outlet. To avoid an electrical circuit overload, be sure that no other appliances are plugged into the same circuit with your heater.

Fan Operation

Turn the thermostat knob (right) in a clockwise direction until it reaches the maximum setting.

Summer service (ventilation only): turn the knob to setting ☸

For heating at reduced power turn the knob to setting ● (1000W)

For heating at full power turn the knob to setting ●● (2000W)

Switching off: turn the knob to setting 0.

Thermostat Control

The thermostat is used to control the room temperature. It acts as a switch and does not vary the amount of heat output from the heater.

Temperature setting:

- Turn the function knob to high temperature setting.
- Once the desired room temperature is reached, slowly turn the thermostat control clockwise until you hear a click. The Fan Heater will now stop operating.
- The Fan Heater will turn on and off automatically maintaining the room temperature that you have set.

Cleaning & General Maintenance

Before cleaning always remove the plug from the power source. Clean the air inlet/outlet grilles frequently. Never use abrasive powders or solvents.

If the cord of this appliance is damaged, stop using this product immediately and contact your retailer for further instructions.

NB Replacement of electric cables must always be carried out by qualified electricians only.

Special Notes

This Fan Heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the Fan Heater by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the Fan Heater.

Connection to power source

Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on bottom of Fan Heater.

Non-Rewireable Main Plug

If your Fan Heater is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). If in doubt, consult a qualified electrician who will be pleased to do this for you. If you need to remove the plug DISCONNECT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Disposal Information

Do not dispose this product as unsorted municipal waste.

Collection of such waste separately for special treatment is necessary.

