

BP-0193

Simple assembly required

2 YEAR GUARANTEE

# 1200W Halogen Heater

- 3 Heat settings 400 / 800 / 1200W
- Includes oscillation
- With safety tip-over switch



This product is only suitable for well-ventilated spaces or occasional use.

MOTTISONS  
home

## IMPORTANT SAFEGUARDS

When using electrical appliances, safety precautions should always be followed. Save these instructions for future reference:

- Keep the appliance at least 100cm (1.0m) from walls and any other combustible materials including clothing, curtains, furniture, etc.
- Read and familiarise yourself with all operating instructions before using this Halogen Heater.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- Do not install the appliance directly below an electrical socket.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**CAUTION – some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**


- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.

- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- Never place the appliance near to flammable material or high pressure containers. (e.g., Paper, wood, petrol, solvents, spray canisters etc.)
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- The appliance should not be installed in areas which have a fire-risk, such as garages, stables or wooden sheds; this is applicable also for rooms in which highly inflammable gasses or dust can develop. Danger of fire!!
- Unplug after each use. Grasp the plug, not the cord.

**THIS APPLIANCE MUST BE EARTHED**

**NB** During the first few minutes of initial use, you may notice a slight odour and a little smoke. This is normal and will quickly disappear. It is the coating applied to the heating elements to prevent any corrosion during transit.

#### Description of parts

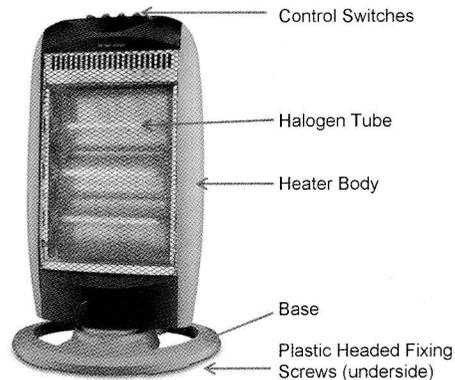

*Please read these operating instructions thoroughly and keep them in a safe place for future reference.*

*Remove all packing materials and discard responsibly.*

*Ensure that the two plastic headed fixing screws are present.*

#### Assembling your Halogen Heater

- Attach the base of the heater to the main body as follows:
- Remove the two plastic headed fixing screws from the baseplate of the heater.
- Thread the power cord through the hole in the middle of the base and then attach the base to the baseplate using the two plastic headed fixing screws.
- Clip the mains cable into the cord grip on the underside of the base and feed it through the slot in the rear edge.


#### Operating Instructions

- **NB** This heater is fitted with a safety tilt switch. The heater will not operate if placed on an uneven surface or a soft/fluffy carpet.
- Place the heater on a solid, level non-flammable surface.
- Ensure that all the control switches are in the off (O) position.
- Insert the mains plug into the mains socket.
- Press the power switch (I) to power up the heater and select the low heat setting (400w - one tube).
- For the medium heat setting (800w - two tubes) press second switch (I) in from the right (leaving the power switch pressed).
- For the full high heat setting (1200w - three tubes) press the third switch (I) in from the right (leaving the first two pressed).
- Press the power switch (O) to switch off the heater.

#### Oscillation Mode

- Press the left hand switch (I) to enable the heater to oscillate from left to right to disperse heat over a larger area.

#### Control Switches

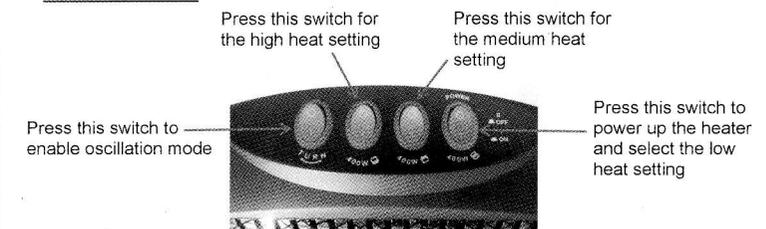

#### Care and Use of your Halogen Heater

- Always disconnect the halogen heater from the mains power supply and allow to cool before cleaning.
- Clean outside of the halogen heater with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge any part of halogen heater in water or any other liquids.

**Technical Data**


Voltage : 220-240V ~ 50Hz  
 Rated power : 1200 W (400+400+400W)  
 Model Number : 2160342

**Electrical Connections**

This appliance is fitted with a fused three-pin plug to BS 1363. If the plug has to be removed, it should be cut off and carefully disposed of immediately. To avoid a possible shock hazard, do not insert the discarded plug into a mains socket.

**Fitting a new plug**

The mains lead must be connected as shown below. The wires are coloured with the following code - Brown wire = Live (L), Blue wire = Neutral (N), Green & Yellow = Earth (E).

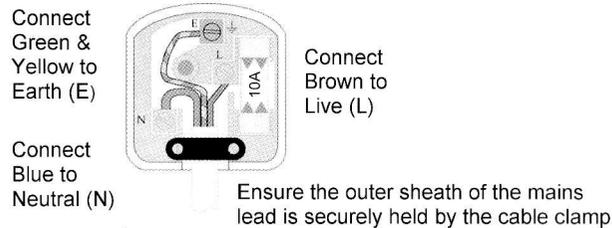

- The Blue wire must be connected to the terminal marked N or coloured Black.
- The Brown wire must be connected to the terminal marked L or coloured Red.
- The Green and Yellow wire must be connected to the terminal marked E or coloured Green.
- Check that there are no cut or stray strands of wire inside the plug.
- Use a 10Amp BS 1362 fuse, only use BSI or ASTA approved fuses.
- If you are in any way unsure which plug or fuse to use, always refer to a qualified electrician.
- After replacing or changing a fuse on a moulded plug, the cover must be refitted to the plug; the appliance must not be used without a fuse cover.

**WARNING: Do not wrap the cord around the heater for storage.**

**ERP Data**

Model		2160342			
Item	Symbol	Value	Unit	Item	Unit
<b>Heat output</b>			<b>Type of heat input, for electric storage local space heaters only (select one)</b>		
Nominal heat output	$P_{nom}$	1.2	KW	manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	$P_{min}$	0.4	KW	manual heat charge control with room and/or outdoor temperature feedback	Not applicable
Maximum continuous heat output	$P_{max,c}$	1.2	KW	electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
<b>Auxiliary electricity consumption</b>			fan assisted heat output		
At nominal heat output	$el_{max}$	0	KW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	$el_{min}$	0	KW	single stage heat output and no room temperature control	[no]
In standby mode	$el_{SB}$	0	KW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
<b>Other control options (multiple selections possible)</b>					
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]

## 2 YEAR GUARANTEE

This product is covered by 2 year guarantee.  
Please retain your receipt in the unlikely event that you need to claim under your 2 year guarantee. Its a good idea is to staple your receipt to your instruction manual for safe keeping as you will need to present it as proof of purchase if you need to return this item.

How to claim on our guarantee:

Take your product into any of our supermarkets' Customer Services counter, alternatively you can call our customer services team on 0345 611 6111.

When claiming:

You will be required to bring /send proof of purchase.  
If the defects above become apparent during the guarantee period we will replace your product with the same product if it is still available in our store. If the product is no longer available we will replace it with a substitute product of an equivalent specification or offer the value of the returned item against a different product at our discretion.

What is not covered:

- Damage caused by unexpected wear and tear or incorrect storage.
- Deliberate damage.
- Damage caused by not adhering to the care instructions provided.
- If there is evidence of product misuse and abuse.
- If the product is deemed to be unsanitary we can refuse to accept the return at our discretion.
- If the component that has failed during the guarantee period is easily replaceable, only the defective component will be replaced.
- Accidental damage – this may be covered by your household content insurance.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Wm Morrison Supermarkets PLC Bradford BD3 7DL.  
Customer services helpline 0345 611 6111 [www.morrisons.com](http://www.morrisons.com)