

Safety Notes for all small angle grinders

- Use the guard and ensure it is fitted correctly.
- Check mounting flanges and the disc are correctly fitted and are undamaged.
- Ensure you are using the correct size and type of disc for the task.
- Ensure the disc, wire brush and sanding accessories are rated in excess of the spindle rpm of your angle grinder.
- Allow a newly assembled wheel to idle off-load for 30 seconds before starting any operation.
- Ensure item to be worked on is stable and secure and will not move.
- Use eye and head protection.
- If in doubt, seek advice, do not use.