



Catering Hot Water Boiler

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose. Do not use other than for heating water.
- This product is intended for indoor use only.
- Keep the mains lead away from the edge of the work surface and out of reach by children.
- Never carry out any alterations or modifications to this product.
- Do not fill the boiler when it is connected to the mains supply.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Never operate electrical appliance in immediate vicinity of water sources. Not suitable for use in bathrooms or outdoors.
- The appliance must be free from descaling treatment before use.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Never touch hot surfaces with your bare hands.
- Do not insert any objects inside the boiler.
- Do not attempt to overflow the appliance as this will cause large spills and possible injuries due to boiling water.
- Beware of steam coming from the lid, especially during refilling.
- Do not attempt to move or carry the water boiler when in use. Remove any liquids from the boiler and allow time for the product to cool down.
- Make sure the hot water boiler is on stable, balanced ground. If you have to use the hot water boiler outside, be sure to use it on a table or another flat surface.
- If the product is damaged or has any defects, please contact cservice@oypla.com

DO NOT ATTEMPT TO OVERFILL THE BOILER'S LIMIT

Operating Instructions

1. Handle
2. Removable Locking Lid
3. Water Gauge
4. Tap Lever
5. Tap
6. On/Off Switch



Before Use

Before first use, rinse out the inside of the water boiler with warm water (without detergent). This is to remove anything from the inside of the water boiler.

The water boiler is not suitable for installation in an area where a water jet could be used.

Minimum and maximum ambient temperatures should be observed when positioning this product, these being: 2°C Minimum/35°C Maximum.

To test if the tap is working, simply fill the water boiler with cold water and pull the tap level.

How to use the Hot Water Boiler

1. Remove the lid by turning the handle in one direction to unlock and reverse the lock.
2. Fill the water boiler with the desired amount of water, making sure to not fill past the 'MAX' level indicator. Do not under fill as this will cause the overheat protection to operate.
3. Connect the boiler to a suitable mains supply.
4. Turn the 'ON/OFF' switch and the water boiler will begin to heat. Do not remove the lid during the heating cycle.

Cleaning and Care

Do not clean the appliance by using a water jet.

The outside of the appliance can be cleaned using a moist cloth and a small amount of non-abrasive detergent.

Do not use harsh cleaners, scouring pads, or solvents to clean any part of your water boiler. These will leave scratches on the metal.

To clean the inside of the appliance, use a descaling solution, following the manufacturer's instructions on the pack of the descaler.

IMPORTANT SAFETY INSTRUCTIONS

⚡ WARNING ⚡

To reduce the risk of fire, electrical shock, or injury when using your water boiler / urn, follow these basic precautions:

- Read all instructions before using the water boiler / urn.
- Never allow children to operate, play with, the water boiler / urn.
- Never overfill the kettle beyond the MAX Mark displayed on the water boiler / urn

-Save these instructions-

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

