

USER INSTRUCTIONS

PLEASE READ CAREFULLY-ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.
- Check that the mains voltage corresponds with the rating of the appliance before operating.
- Do not touch hot surfaces-Use handles or knobs.
- To protect against electric shock ,do not immerse cords, plugs appliances in water or any other liquid.
- Do not leave any appliance unattended while it is operating.
- Unplug from outlet when not in use or before cleaning, allow to cool before putting on or taking off any parts.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner .If the supply cord or appliance is damaged ,it must be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- To disconnect remove the plug from the MAINS outlet. Do not pull plug out by the cord

- Do not use this product for anything other than its intended use. The appliances are not intended to be operated by means of an external timer or separate remote-control system. This appliance is for household use only.
- No liability can be accepted for any damage caused, by non-compliance with these instructions or any other improper use or mishandling.


HOW TO USE YOUR HOB

Before using your hob for the first time, turn the hob on the highest setting for 3 to 5 minutes to condition the protective coating, this should be the only time the hob is turned on without a cooking utensil on it.

For the most efficient operation of your hob the cooking utensils used should have a solid base and be as even as possible ,and a diameter of approx 15 (1000w small) to 17 cm (1500w large) and the base diameter of cooking utensils smaller than the diameter of the hob should not be used.

Cooking utensils ,regardless of their size, should not project beyond the hob or intrude into the area of close proximity of the controls

Utensils with convex ,concave or uneven bottoms should not be used

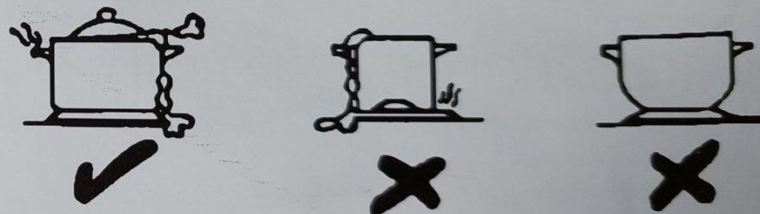

OPERATION OF CONTROL

Turn the control dial clockwise, when the dial passes the three dots you will hear the thermostat click on then turn the control(s) to the recommended position (in accordance with guidelines of the food you are preparing) to achieve the desired temperature.

NOTE: BOTH HOB CAN BE USED AT THE SAME TIME HOWEVER CARE MUST BE EXERCISED TO PREVENT THE COOKING UTENSILS HANDLES FROM PROTRUDING OVER THE ADJACENT HOB

IMPORTANT: WHEN NOT IN USE ALWAYS TURN THE CONTROLS ANTI-CLOCKWISE TO THE OFF POSITION (SMALL DOT ON THE CONTROL DIAL) AND DISCONNECT FROM THE POWER OUTLET

NOTE: THE LAMP WILL GO OFF WHEN THE HOB REACHES THE SELECTED TEMPERATURE, AND WILL CYCLE ON AND OFF TO MAINTAIN THE TEMPERATURE

FOR YOUR SAFETY

WHEN USING YOUR HOB, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

- . Never immerse the hob in water or any other liquid.
- . Oil and fat being heated are not to be left unattended without adult supervision.
- . Do not touch the surfaces or the hob when in operation, as they get hot.
- . The hob is designed only for the heating and cooking of food and must only be used with cooking utensils placed on it.
- . The hob must be turned to off setting and disconnected from the power outlet when not in use.
- . Cooking utensils, regardless of their size, should not project beyond the hob or intrude into the area of close proximity of the controls.
- . It is dangerous to operate any electrical product with a damaged cord or plug, or after the product malfunctions or is dropped or damaged in any manner. Return the complete product to the place of purchase for inspection and repair.

THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

- . Children should be supervised to ensure that they do not play with the appliance.
- . If the supply cord is damaged it must be replaced by the manufacturer, his agent or a suitably qualified person in order to avoid a hazard.

HOW TO CARE FOR YOUR HOB

- . Disconnect the hob from the power outlet.
- . Do not immerse the hob in any liquid.
- . Do not allow the cord to touch any hot surfaces of the hob.
- . Clean the painted surface with a damp soft cloth and mild household cleaning powder.
- . Baked on marks on the circular hob can be removed with a household cleaning powder, turn the unit on for a moment to dry after cleaning.
- . Commercially available hob cleaners are recommended to preserve the natural finish of the hob.

READ AND SAVE THESE INSTRUCTIONS

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling, please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



Imported by L24 9WD

MADE IN P.R.C



Electric Twin Hob

2500 Watt



1500W
LARGE
HOB

1000W
SMALL
HOB

NON
SLIP
FEET

THERMO-
STATICALLY
CONTROLLED

OVERHEAT
PROTECTION