

*Received from Status Health
Summer of 2010*

STATUS®

*File
(for status
unit 15)*

16" OSCILLATING STAND FAN



I belong to
Rwy'n perthyn i



BP-0776
bentygpenarth@gmail.com

Thank you for purchasing a Status 16" Stand Fan. We recommend that you spend some time reading these instructions in order to fully understand all the operational features it offers.


Important Instructions – Retain for future use.

Important Safeguards

When using this electric fan, in order to reduce the risk of fire, electric shock and/or injury to persons, basic safety precautions should always be followed, including:

- The appliance is for household and indoor use only.
- Before plugging in, check that the voltage on the fan rating label is the same as the mains supply.
- To protect against electric shock, do not immerse any part of the fan in water or other liquid.
- This fan is intended for use by competent adults only and children should be supervised at all times.
- It is recommended to unplug the fan from the mains socket when not in use.
- Always remove from the mains socket before cleaning.
- The supply cable cannot be replaced. If the cable is damaged the appliance should be scrapped.
- Do not let the cable hang over the end of a table or work surface, or touch hot surfaces.
- Do not use the appliance for other than its intended use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised. Children from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Don't use this fan in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the fan where it may fall into the bath tub or other water container.

Assembly

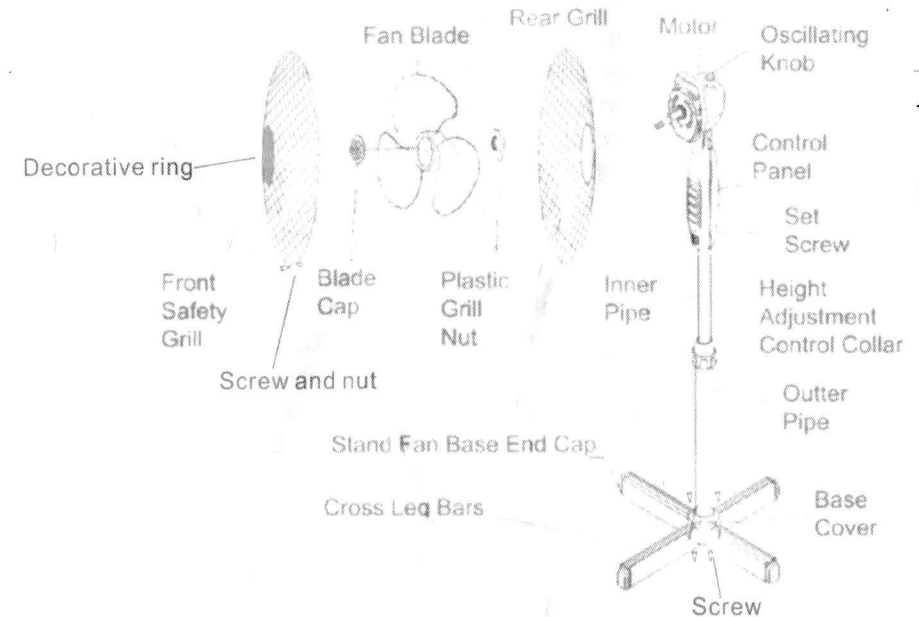

1. Unscrew the **Height Adjustment Control Collar** from the **Outer Pipe** by turning Counter-clockwise and set aside. Pull out the **Inner Pipe** all the way to the top. (You may have to push it up from the bottom to get it up)
2. Set the base on a level dry surface removes the screws from the **Base**, then install the **Outer Pipe** ensuring that it matches the 4 holes over the screw holes on the base and insert the 4 screws back onto the base. *— this slipped out up at the bottom (base) it when base was constructed*
3. Place the **Base** through the column with the tabs/slots pointing downward.
4. Replace the **Height adjustment Control Collar** and tighten by turning clockwise.
5. Place the fan motor into the top of the inner pipe and tighten the **Set Screw**.
6. Unscrew the **Blade Cap** and **Grill Nut** on the front of the motor by turning counterclockwise.
7. Mount the **Rear Grill** to the motor front cover by matching the 3 holes on the guard to the 3 round positioning knobs on the motor front cover. Push in firmly until the 3 knobs protrude through the 3 holes.

8. Replace and tighten the **Grill Nut** by turning the nut clockwise to hold the **Rear Grill** in place.
9. Put the **Fan Blade** onto the motor shaft by matching the shafts slots with the blade slot, tighten the **Blade** with the **Blade Cap** by turning it counterclockwise.
10. Test the fan by rotating with your hands, make sure there isn't any contact with the nut. The fan blade should rotate freely, otherwise repeat all steps again, beginning from step (4).
11. Use 3 screws to install the decorative ring in the middle of front grill.
12. Mount the **Front Safety Grill** onto the **Rear Grill** by hanging the top hook clip of front grille over the top of the Rear Grill. Close the clasps all around the grill, finally fit the nut and screw through the hole in the bottom edge of the front grill and tighten.

Operating Instructions

Connect the plug to a suitable power socket.

Select the desired speed by selecting the switch as follows:-

- 0 = Off
- 1 = Slow
- 2 = Medium
- 3 = Fastest

Oscillation Function

The oscillation of the fan can be started by pushing down the button on top of the motor housing and stopping by pulling up the button.

Maintenance

- Always remove the plug from the socket outlet before cleaning it.
- Wipe the fan with a soft damp (not wet) cloth.

WARNING:

Do not immerse the fan in water.

Do not use any cleaning chemicals such as detergents and abrasives.

Do not allow the interior to get wet as this could create a hazard.

- In case of malfunction, do not try to repair the fan yourself, it may result in a fire hazard or electric shock.

This appliance is fitted with either a moulded or rewirable BS1363 plug. The fuse should be rated at 3 amps and be ASTA approved to BS1362. If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.


If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below. If you remove the plug it must not be connected to a 13 amp socket and the plug must be disposed of immediately.

The wires of the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL, BROWN = LIVE

The wire which is coloured BLUE must be connected to the terminal in your plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in your plug which is marked with the letter L or coloured RED.

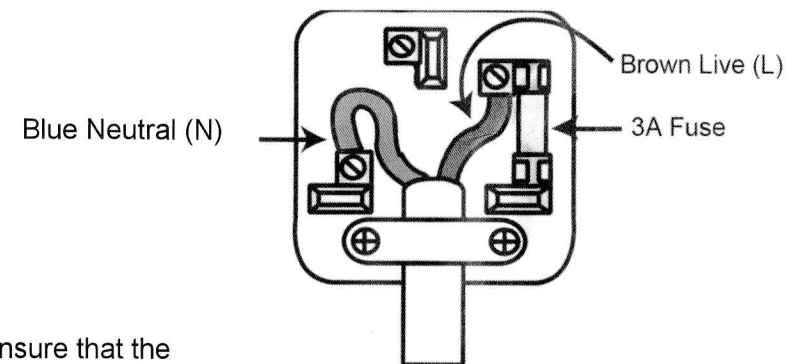

Ensure that the outer sheath of the cable is firmly held by the clamp

This product is under continuous product development and the design may alter to that on the instruction manual or box without prior notice.

Specification

Rated voltage : 220-240V ~ 50Hz
Power consumption : 50 watts

Contact Helpline

Monday – Friday 9.00 a.m. – 5.00 p.m.
01274 852200

This product is under continuous product development and the design may alter to that on the instruction manual or box without prior notice.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Status International (UK) Limited
Pennine House, Mortimer Street,
BD19 5AR